




# 3900/TR35P/480 Feed Hose Installation Instructions

With hose connected to pool wall at return line, extend hose to the farthest point on the pool. End must be within 6" of this point — longer or shorter — indicated in the diagram by the dotted line.

**Hose too long?** Cut excess length from First Hose Section and reconnect hose sections.

**Hose too short?** Buy an additional hose section, one swivel, and two hose nuts. Add and remeasure hose.

After attaining proper hose length, install back-up valve from old hose and position hose floats as shown.

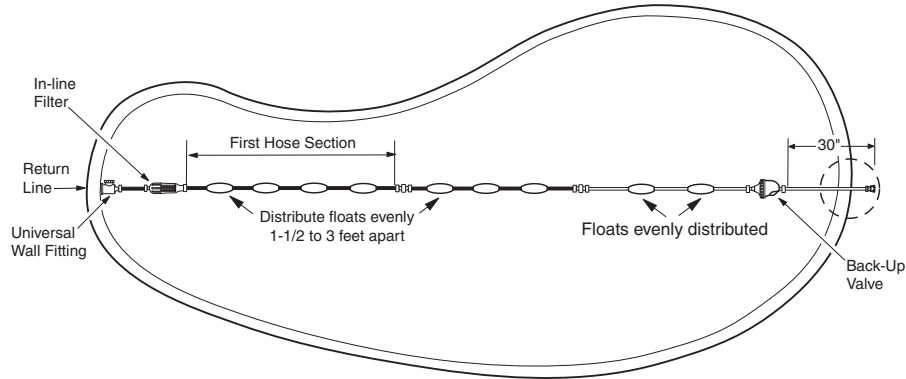

**Zodiac Pool Systems, Inc.**  
2620 Commerce Way, Vista, CA 92081  
1.800.822.7933 | [www.polarispool.com](http://www.polarispool.com)

© 2016 Zodiac Pool Systems, Inc. All rights reserved. Polaris® and the Polaris 3-wheeled cleaner design are registered trademarks of Zodiac Pool Systems, Inc. All other trademarks referenced herein are the property of their respective owners.

TL-1152 Rev B